



## ASSEMBLY INSTRUCTIONS

## INSTRUCCIONES DE MONTAJE / INSTRUCTIONS DE MONTAGE



1

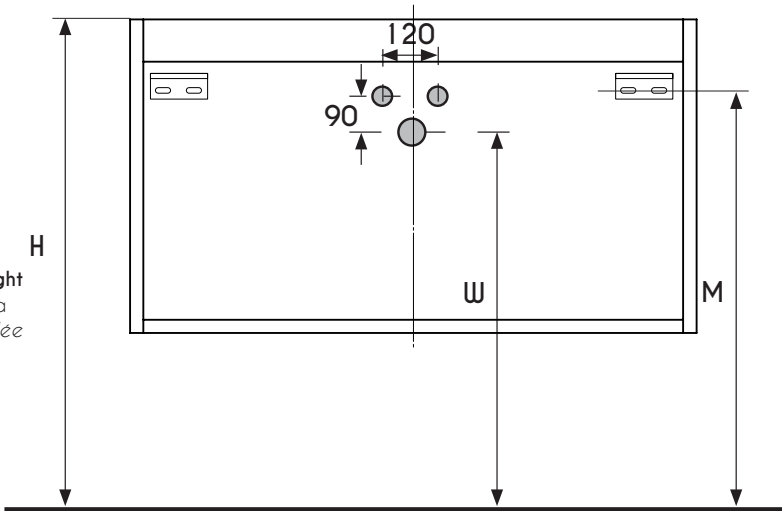


Recommended height  
Altura recomendada  
Hauteur recommandée

|  | H   | M   | W   |
|--|-----|-----|-----|
|  | 860 | 740 | 660 |
|  | 815 | 695 | 640 |
|  | 730 | 610 | 510 |


mm.

2

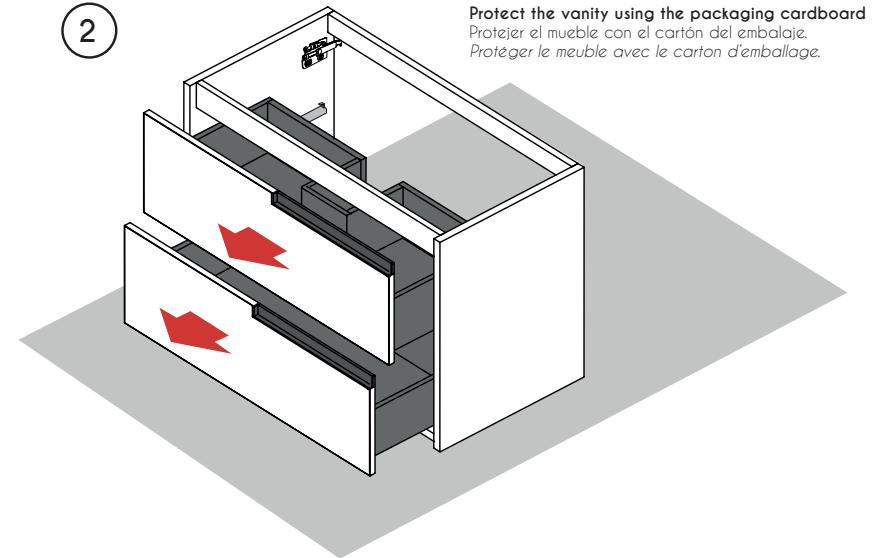


Protect the vanity using the packaging cardboard  
Proteger el mueble con el cartón del embalaje.  
Protéger le meuble avec le carton d'emballage.

3





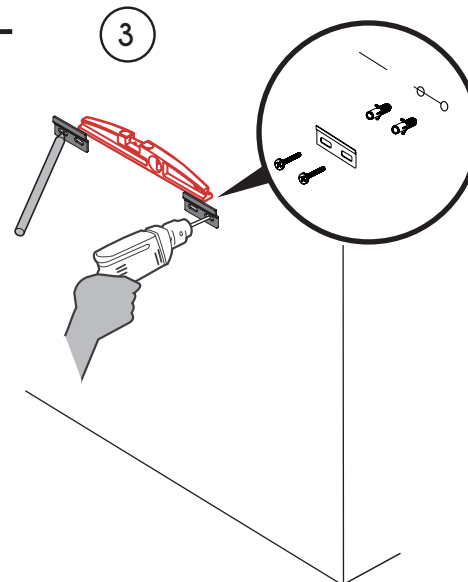


4

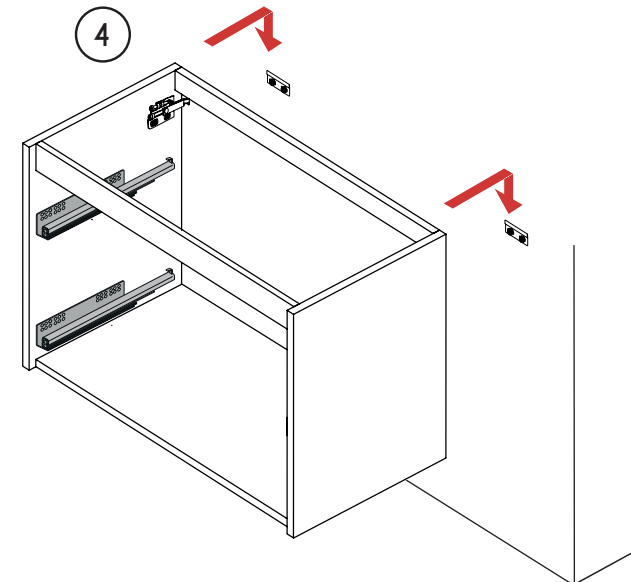


## ASSEMBLY INSTRUCTIONS





## INSTRUCCIONES DE MONTAJE / INSTRUCTIONS DE MONTAGE

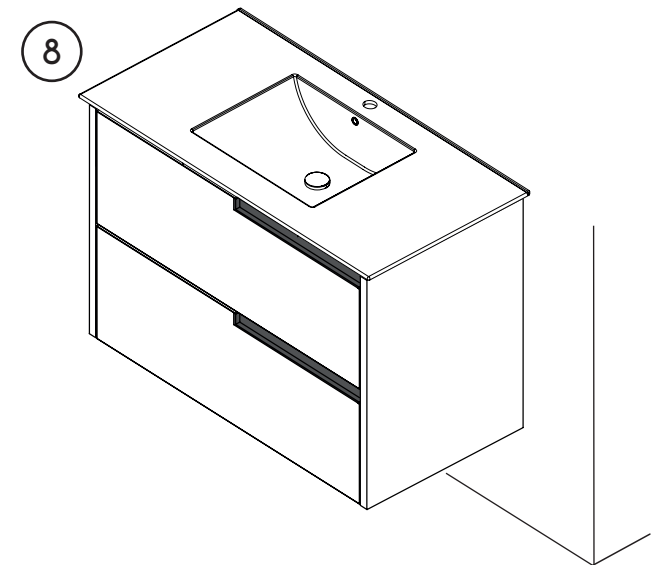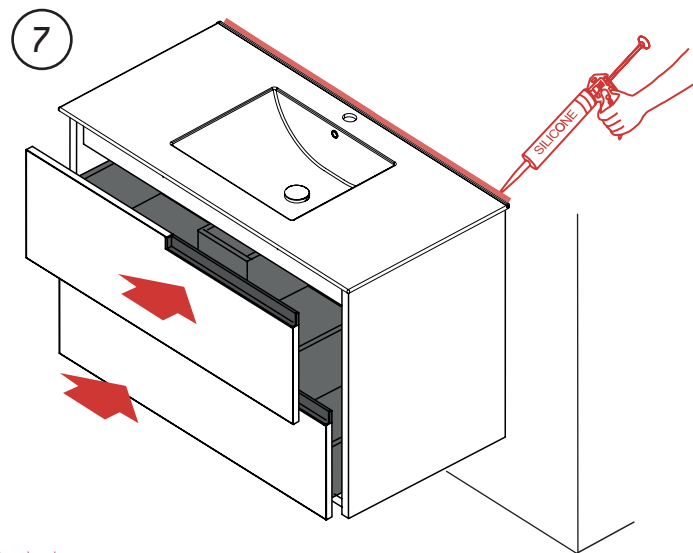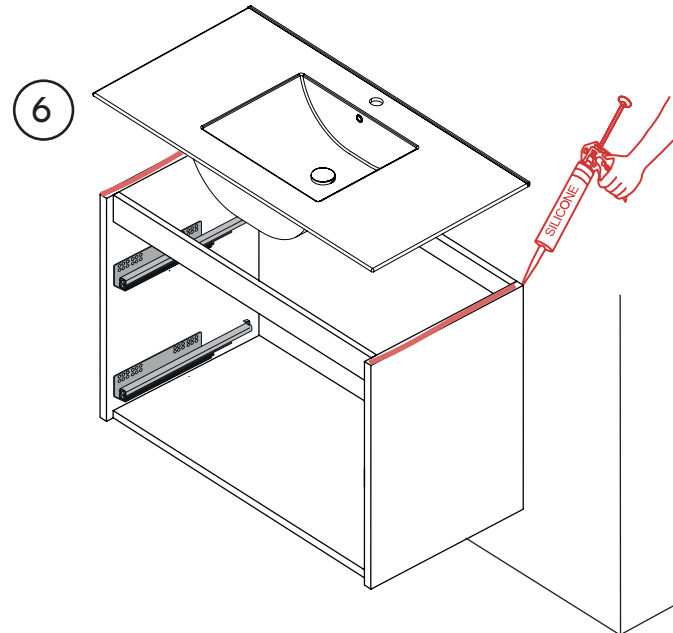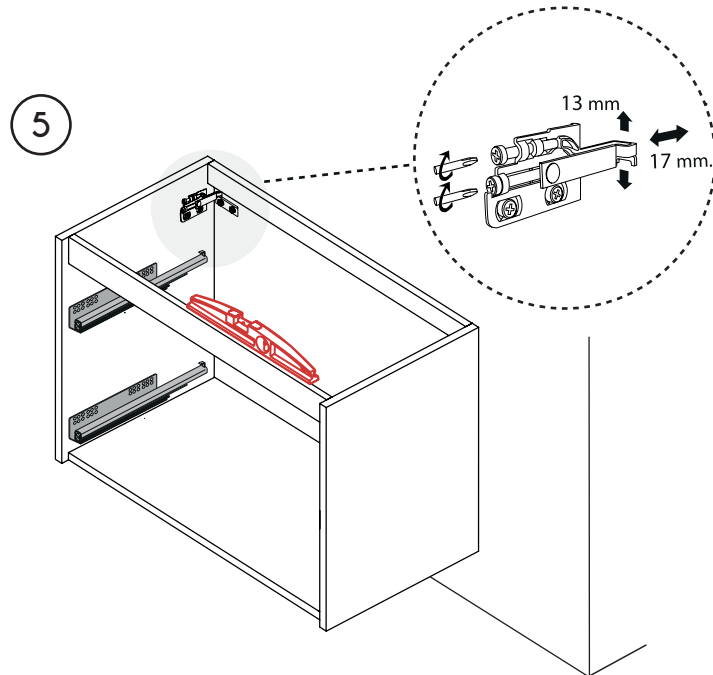

## ASSEMBLY INSTRUCTIONS INSTRUCCIONES DE MONTAJE / INSTRUCTIONS DE MONTAGE



### Adjusting front panel, drawer Ajuste del frente de cajón Réglage de la façade du tiroir

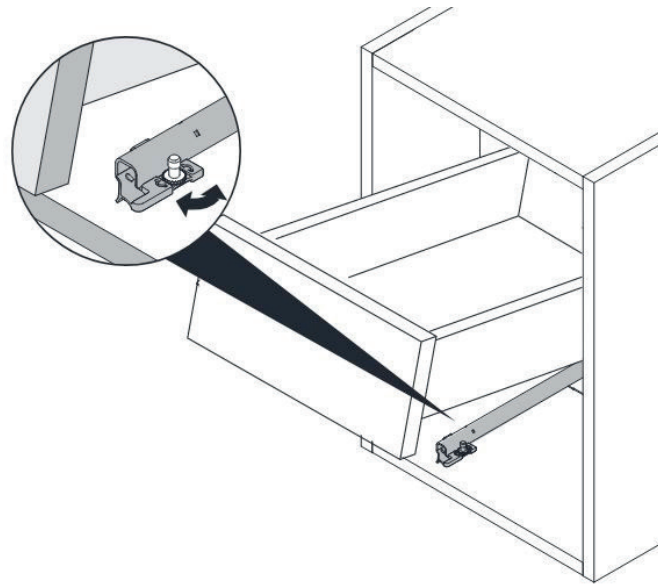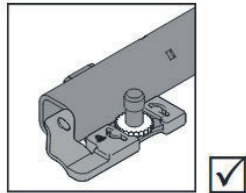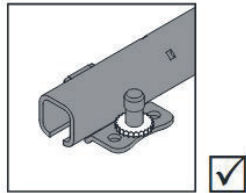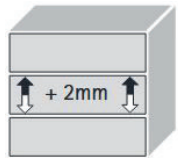

### Installing drawer Insertar el cajón Installer le tiroir

